

## **Re: Instructions for single drawer alignments**

### **Drawer Alignment**

If you have a drawer with spacing that is not accurate or aligning with the other drawers, you will first adjust ONLY that drawer by following the steps below.

Remember to remove the drawer before making alterations. All cases have an information sheet explaining the drawer removal process.

1. Ensure that all screws, holding the tracks, are tight on the case and drawer box.
2. If you find a loose screw on the case track, center the screw on the track slot, and tighten the screw.
3. If the drawer is still not aligned, adjust the front track screw on the front of the drawer box.
4. Remember, these processes will require a small degree of trial and error; make 2-3 attempts should the first fail.

### **Drawer tight to the case**

1. Properly aligning the drawer should solve the problem of the drawer not staying tight to the front of the case.
2. If you have a drawer that is not staying closed, then first refer to your Drawer Removal Instruction sheet (step #2)
3. Check the track on the drawer box; the spacing should be approximately 3/16" from the drawer front to the front of the track.